

## **How To Install A GT Style Pony Delete Grille w/ Fog Lights (05-09 V6)**

### Tools Required:

- GT style grille
- Phillips screwdriver
- Flat head screwdriver
- Drill (optional; just speed up process)
- Ratchet
- 8mm socket
- 10mm socket
- Duct tape

### Installation instructions:

1. Gather items needed for installation



2. OPTIONAL: Unscrew four screws holding in the fog lights



3. Using Duct tape, tape the fog light bracket to the fog light backing; the plastics are a little flimsy so I opted to try and reinforce them.



4. Re-install the fog lights onto the GT style grille




5. Pop your vehicles hood



6. Prop your hood up correctly



7. Using an 8mm socket, unplug the negative battery terminal

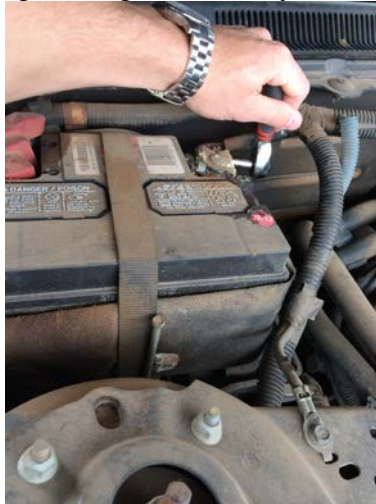

8. Using a flat head screwdriver, pop out the 6 push pins that keep the radiator cover attached



9. Once all 6-push pins are removed, take off the radiator cover



10. Using a 10mm socket, remove the two bolts connecting the bumper to the vehicle



11. Once the bolts are removed, lift the bumper up and over a small stopping pin



12. Remove 3 phillip head pin screws located on the inner splash shield. **NOTE:** From now until specified, removal shall be done identical to both sides of the vehicle.



13. Unplug the turn signal connector and the headlight bulb



14. Using a 10mm socket, remove the bolts that connect the bumper to the frame. They are located directly above the turn signal light





15. Now, all bolts are successfully removed, you can remove the entire front bumper. Be sure to place a towel or blanket on the ground so the bumper is not scratched



16. Using a flat head screwdriver, pry out the tabs keeping the stock grille in place. Be careful not to damage the connecting opening for the new grille



17. Double check all the snap in connections from the new GT Style Grille into the bumper



18. Prepare the bumper for re-installation



19. **NOTE:** Due to clearance issues you must snip a tiny piece of the fog light housing off and slightly bend the horn bracket for correct fitment. Once done the grill should snug.



20. Once fitment is perfect, re-connect the turn signal lights and headlights



21. Re-install the 10mm bolts connecting the bumper to the frame



22. Push the bumper over the stopping pin and re-install the 10mm bolts connecting the grill portion of the bumper to the body



23. Re-install the 6 push pins on the radiator cover





24. **NOTE:** If you removed your entire splash shield shimmy it back into place and plug back the original push pins



25. Re-connect your negative batter terminal using an 8mm socket



26. Close your hood and enjoy your new GT Style Pony Delete Grille w/ Fog Lights.  
**NOTE:** I did not previously have the pony package nor did I connect the fog lights to make them functional.



ENJOY



**Installation Instructions written by AmericanMuscle customer Laurence Arroyo 7.24.2014**