

Cervini's C-Series Lower Side Scoops (05-09) - Unpainted - Installation Instructions



The below installation instructions work for the following products:

- **Cervini's C-Series Lower Side Scoops (05-09) - Unpainted**



Please read through the instructions carefully before starting this project. Take the time to get all the materials together as well as all the safety equipment.

Overview:

Prefit all parts before painting. The surface that is in contact with the 3M 2-sided tape must be cleaned with isopropyl alcohol & the temperature must be a minimum of 75 degrees F, before applying. Allow the 2-sided tape to dry 24 hours before driving.


Painting Instructions :

1. To remove any mold release contaminants, clean the back of the part first. Using 2 new clean rags, saturate the first rag with plastic prep cleaner* and begin cleaning. Then use the second rag to remove the prep cleaner. Continuously fold both rags to their clean sides during the process. Use 3 sets of new rags throughout the process. This prevents mold release contaminants from transferring to the painted surface.
2. Repeat step one on the front of the part.
3. Rinse the part with water. Apply a generous amount of Ajax® or sand fix* to a red scuff pad* (3M Scotch Brite Brand) and scrub the surface to be painted THOROUGHLY (especially where the 2-sided tape is installed, on the back side of the part, and all the hard to reach areas). Then rinse with water and dry. The scrubbed surface should be dull. If any shiny spots show, repeat the process on those areas.
4. Using another set of clean new rags, again clean the surface to be painted with plastic prep cleaner.
5. Spray the surface to be painted with adhesion promoter* including the areas where the 2-sided tape is installed (follow the instructions on the can for application and drying time).
6. Apply 3 to 4 coats of urethane primer* with flex additive* (follow the instructions on the can for application and drying time).
7. Wet sand primer with 600 grit sandpaper. Be careful not to sand through the primer. If you do, you MUST clean those areas with plastic prep cleaner, apply adhesion promoter and prime. Once the primer has dried, wet sand the areas that were touched up. Your surface is now ready for paint.

Installation Instructions:

1. Included in the hardware packet is a roll of 2-sided tape. After the side scoops have been painted, install the 3M 2-sided tape along the guideline 1/8" away from the outer edge **as shown in Fig A.**

Fig. A

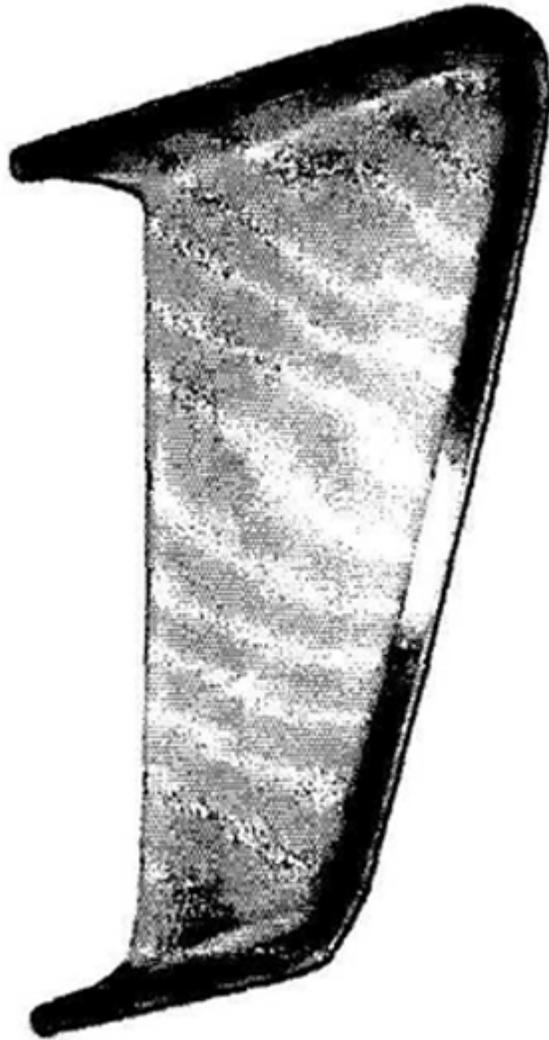

2. Mask off the red backing and the front edge with 2" masking tape, leaving the center inside portion of the scoop exposed.
3. Scuff the inside surface with a gray scuff pad and paint it with flat black paint.
4. Remove tape backing and press onto the car.

Installation instructions provided by Cervini

Find more **how-tos, instructions** and **videos** at www.americanmuscle.com!

