

Airaid Modular Intake Tube (15-17 EcoBoost) Install Guide

List of Tools:


Flathead Screwdriver

Channel Locks/Pliers

Ratchet

6mm and 8mm Socket

Before Image:

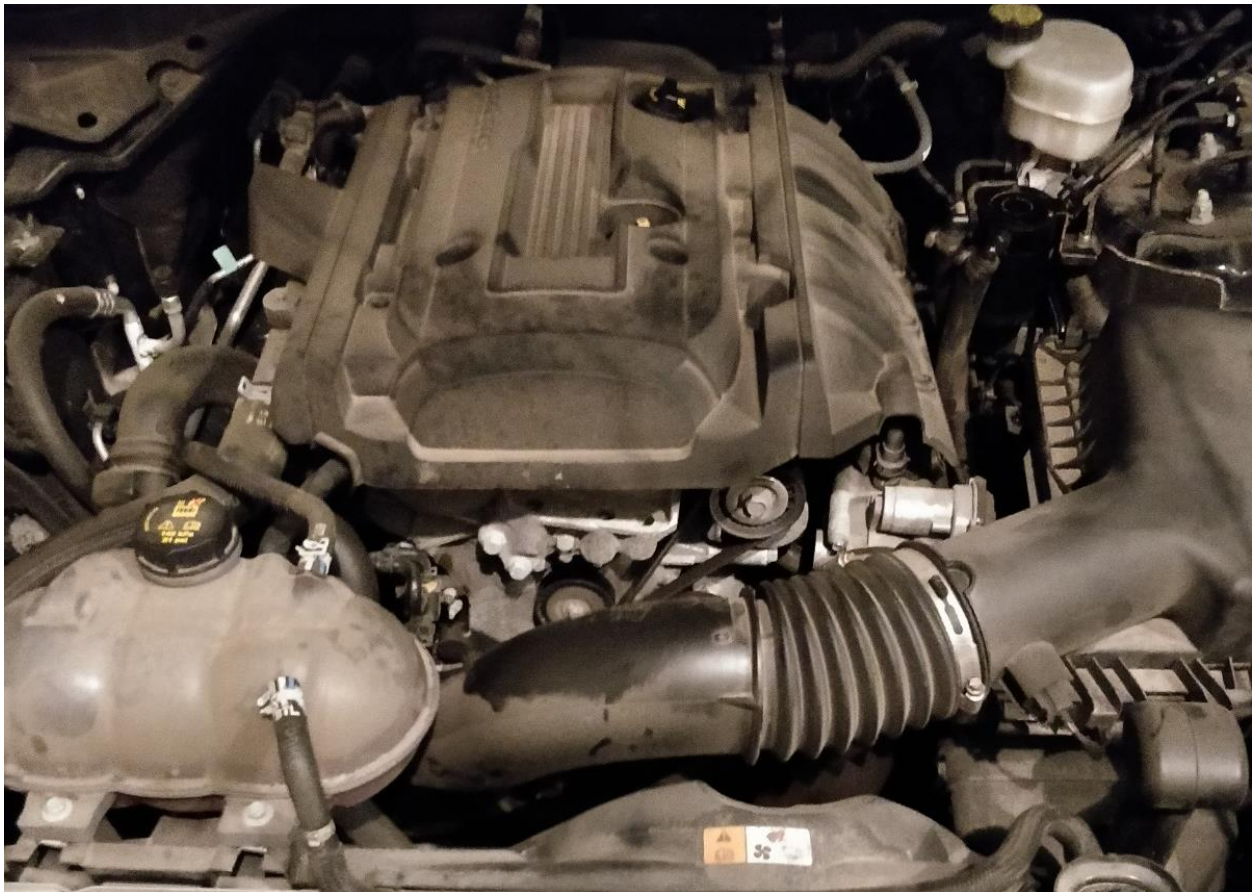

Step 1: Attach the included couplers to the intake tube.



Step 2: Use clamp #56 on the smaller end and clamp #68 on the large end to secure the couplers. Tighten with a flathead screwdriver.



Step 3: Insert the rubber grommet followed by the aluminum fitting into the intake tube.



Step 4: Loosely attach clamp #40 on the smaller end and clamp #60 on the larger ends of the couplers to complete the intake tube prep.



Step 5: Disconnect the negative terminal of the battery.

Step 6: Disconnect the inlet side of the old intake tube by loosening and twisting the clamp.



Step 7: Loosen the clamp on the outlet side of the stock intake tube.



Step 8: Disconnect the PCV and turbo bypass lines from the stock intake tube and then remove the tube from the vehicle.




Step 9: Place new tube into the car and slide over turbo inlet coupler first followed by the airbox side. Reattach PCV and turbo bypass lines and tighten clamps.



Step 10: Reconnect negative side terminal on battery to complete installation.

After Image:

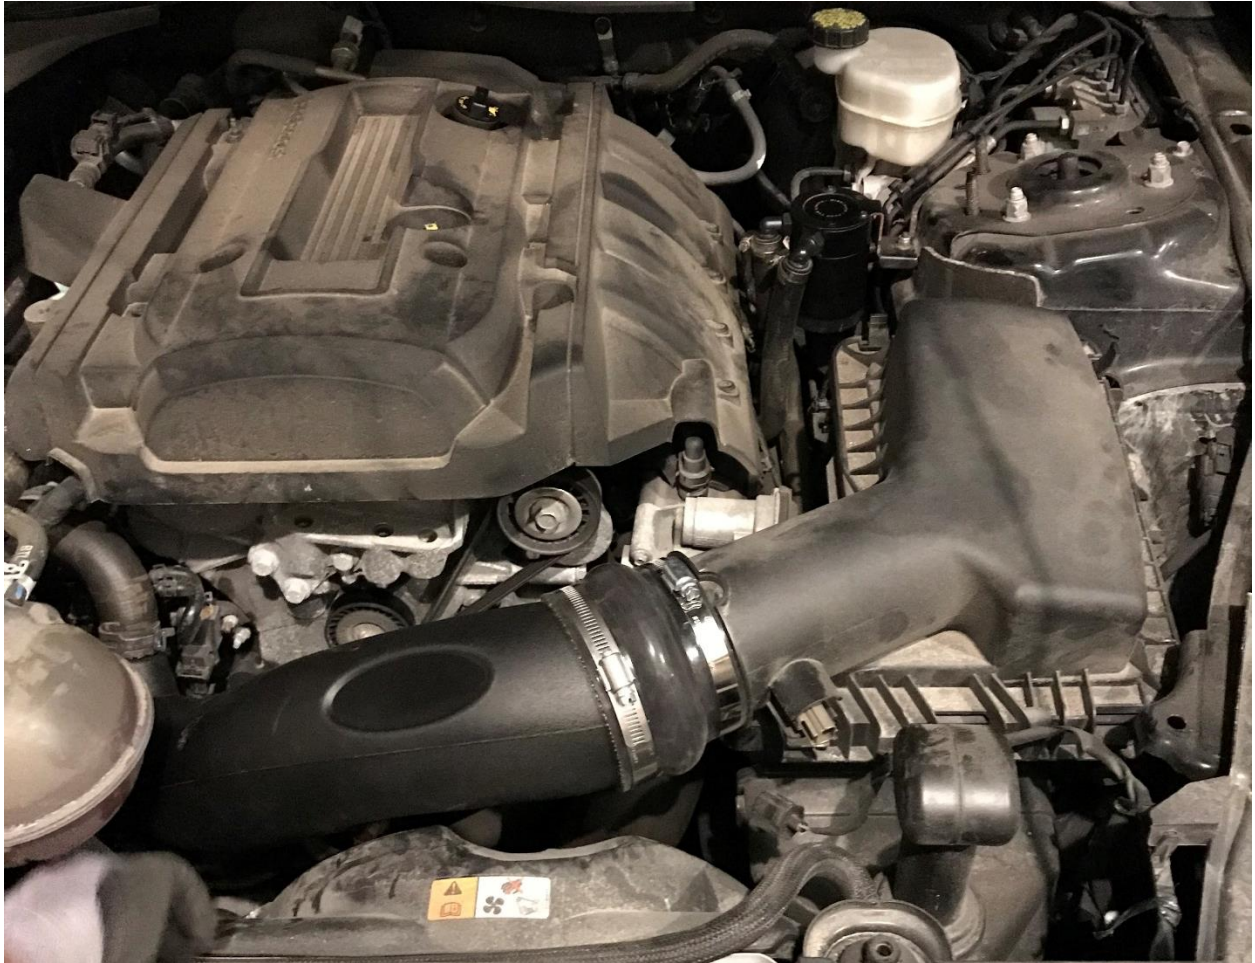

Installation Instruction Written by AmericanMuscle Customer 10/16/18