

# Carbon Fiber Spoiler Installation Guide

## Shelby GT500

**Installation Time: 45 Minutes**

**Tools Required:**

- ✓ 9/32" Socket
- ✓ Phillips Screwdriver
- ✓ 10mm Socket
- ✓ Ratchet
- ✓ Permatex or Loctite

**Installation Instructions:**

1. Unpack spoiler from box, take care not to damage carbon fiber!



2. Remove OE spoiler from vehicle by removing 12 bolts and 4 screws underneath the OE spoiler



3. Remove 4 bolts (2 each side from Wheel well)




4. Install New Spoiler by first clipping the tabs on the spoiler to underside of front bumper




5. Make sure to align holes in Carbon Fiber spoiler with Bolt holes in bumper

6. Install 12 bolts in new carbon fiber spoiler using Loctite or Permatex

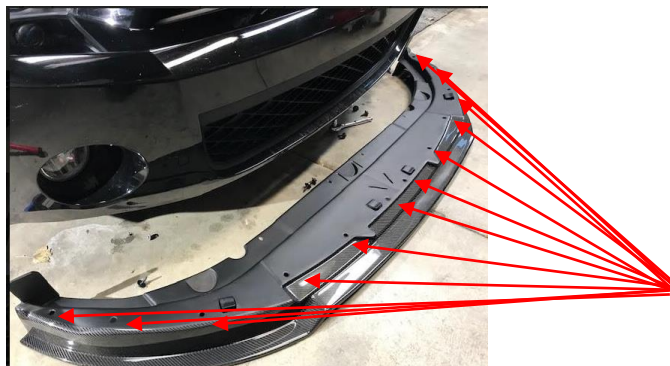

7. Install 4 screws in back of spoiler

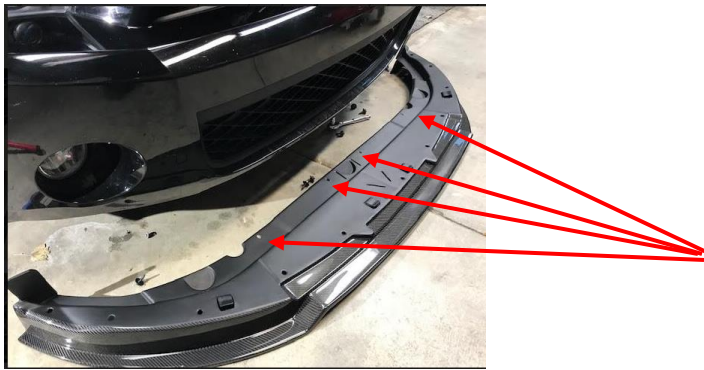

8. Install 2 bolt/screws (2 in each side of wheel well) (Note: holes must be drilled in new spoiler as they are not drilled from the Factory)



9. Make sure all bolts are tight!



Installation Instructions Written by American Muscle Customer Drew Butler 12/31/18