


## SpeedForm Running Pony Grille Emblem w/ Bracket – Black

Tools needed: Philips Screwdriver

1. Open the hood to gain more clearance to the stock grille



2. Remove both screws above the stock emblem

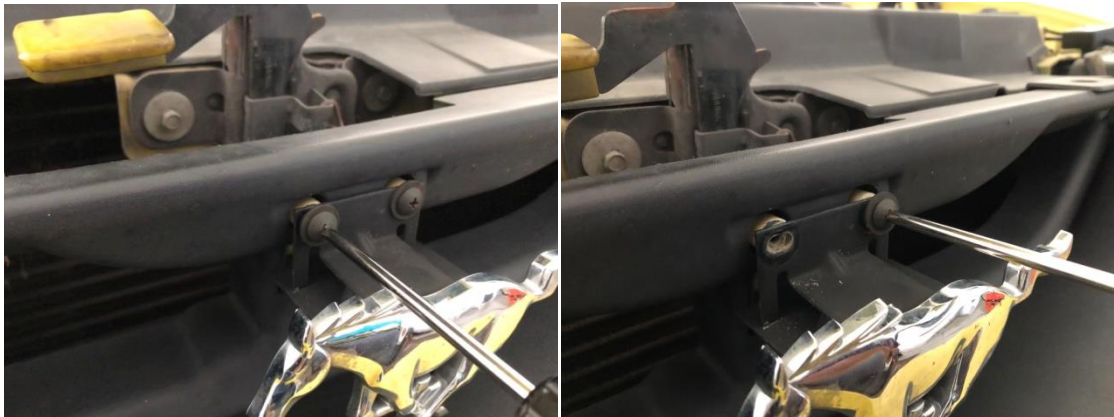

3. Pull up on stock emblem to remove from grille



4. The new SpeedFrom Running Pony Grille Emblem doesn't have the same bracket as the stock one so you will need to hold it while you put the screws in



5. Just make sure it is centered before you tighten down the screws and then you are good to go; drop the hood and go for a cruise with this stylish new emblem!



Installation Instructions written by American Muscle customer N. Trulson on 3/19/18.