

MBRP Black-Series Axle-Back Exhaust

(2018 GT w/o Active Exhaust)

Item 403867

MPN# S7211BLK

Required Tools:

- Sawzall w/ metal cutting blade
 - **Optional:**
 - 13mm Socket
 - 15mm Socket
 - 3/8 ratchet
 - 3/8 extension
- 8mm Hex Key
- Ramps

Removal of Factory Exhaust:

1. Position Car on jack stands, ramps or lift
 - **Steps 1 through 4 Optional, if not necessary jump to #5**
2. Using a 13 mm socket and 3/8 drive ratchet, remove the hanger bolts above the rear end.
3. Using a 13mm socket and 3/8 drive ratchet, remove exhaust clamps in front of the OEM resonator.
4. Remove entire OEM Cat back system as one.

5. Using a Sawzall, cut the factory mufflers off at the inlet elbow, circled in red.


- **Manufacturer's Instructions read as following**
- "Cut the mufflers and inlet elbows off at the end of the short straight section of tubing on the OEM cat-back. There should be approx. 2" of straight tubing remaining on the OEM cat-back. It is critical that this straight length of tubing remain on the OEM cat-back to allow installation of the MBRP Axle Back Kit."

6. Slide Factory muffler out from rear muffler hanger



Installation:

1. Slip the MBRP exhaust into the muffler hanger at the rear most part of the car, then slip pipe onto the factory exhaust.
2. Tighten proved clamps with 15mm Socket

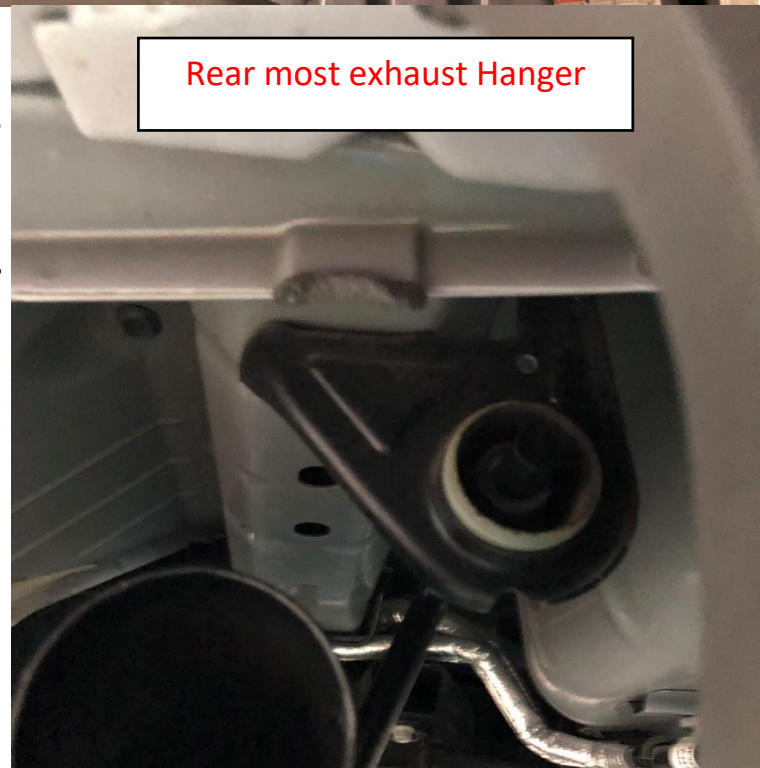

3. Install tips on to axle back as preferred.
Tighten Bolts using your 8mm Hex key.
4. Put car back on the ground and ENJOY!



BEFORE



AFTER



AFTER

