


# MP CONCEPTS

## 2015-2017 Roof Spoiler - Matte Black

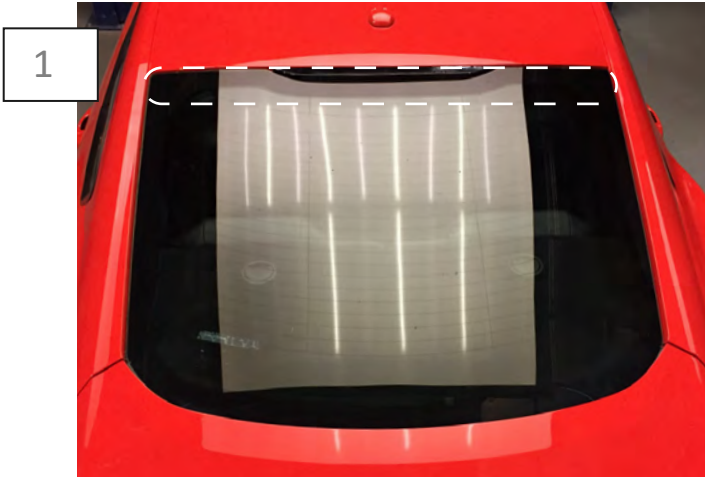

Wash the rear window with soap and water. Allow the window and surrounding areas time to dry.  
**\*\*Recommended:** Wipe the top edge of the rear window glass with isopropyl alcohol to ensure the cleanest surface possible.



Apply the supplied 3M tape to the spoiler. Test fit the spoiler on the vehicle to familiarize yourself with how it fits.



Once you are comfortable with how the spoiler fits, remove the tape backing and install.



Apply firm even pressure to all taped surfaces to ensure proper adhesion.