JLT Performance Ram Air Intake (99-01, 03-04 Cobra) - Installation Instructions



The below installation instructions work for the following products:

- JLT Performance Ram Air Intake (99-01 Cobra)
- JLT Performance Ram Air Intake (03-04 Cobra)




Please read through the instructions carefully before starting this project. Take the time to get all the materials together as well as all the safety equipment.

Parts Included


- (1) JLT Painted Pipe
- (1) Rubber Elbow for Throttle Body w/ Clamps
- (1) Silicon Reducer for Pipe to MAF w/ Clamps
- (1) MAF spacer -96-01 only
- (1) JLT Heat Shield
- (1) Billet MAF Adaptor with bolts
- (1) 4x9" S&B Air Filter and any needed IAC, PCV and/or vacuum lines for your model year.

Installation


- 1. Remove your stock intake system from the throttle body to the filter housing.
- 2. Unbolt your MAF from the filter housing and install MAF filter adaptor. You do not reuse the screen.

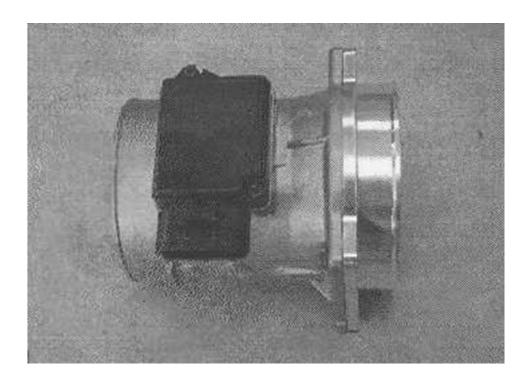

- 3. Clamp the air filter to the adaptor.
- 4. Remove your air temperature sensor and install in the grommet on bottom side of JLT painted pipe.
- 5. **03, 04 Cobra only** Remove the large vacuum connection on the line at throttle body. The supplied vacuum line will connect the bottom fitting on pipe to the factory line.

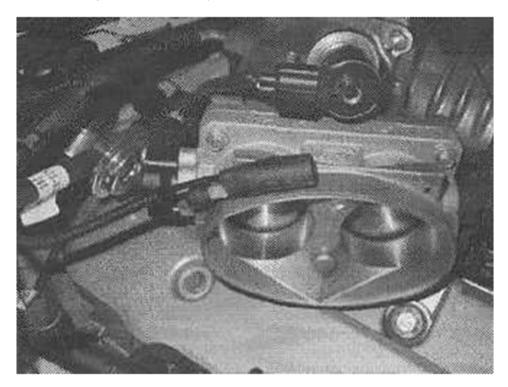

- 6. Install MAF / filter unit to the pipe, using the reducing coupler and tighten all clamps.
- 7. Install complete set up to the throttle body. Tilt filter in toward headlight and bring down to meet with throttle body.
- 8. **03, 04 Cobra only** Connect the new vacuum line to the original and plug in the air temp.

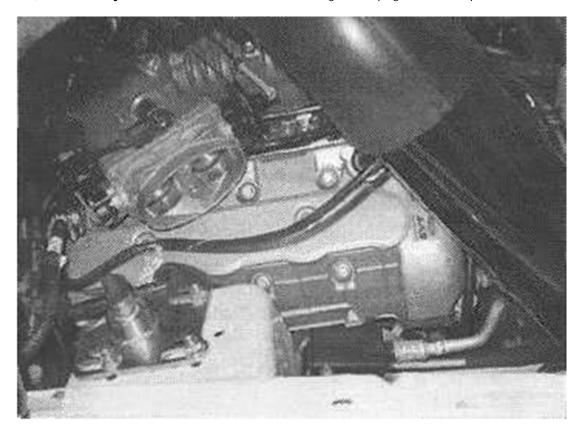

- If used, install rubber hose to valve cover.
 Note: cut about a 1/2" off end of hose. Not included but if needed, zip tie the ends for a better fit.
 Bullitt owners, use supplied % hose to connect IAT and use factory PCV connection to the fittings on the JLT pipe.
- 10. Plug in MAF and check all clamps. Make sure clamp doesn't interfere with throttle linkage.
- 11. Bolt heat shield to stock airbox location with stock bolt.

Installation instructions provided by JLT

Find more how-tos, instructions and videos at www.americanmuscle.com!