

How to Install Tail Lights for 1996-1998 Mustang



The below installation instructions work for the following products:

- [Raxiom Smoked Tail Lights \(96-98 All\)](#)

Here at American Muscle, we're all about DIY (do it yourself). Of course, there's nothing wrong with seeking out a little bit of tech help prior to taking on an installation on your own. Our Mustang installation guides will provide valuable instructions and hopefully answer any how-to questions that you may have along the way.

Tools needed:

- Phillips-Head Screwdriver
- 11mm Socket or Wrench

Installation:


1. Using a Phillips-head screwdriver, remove the [trunk](#) insulation retaining clip as shown below.




- Using an 11mm socket or wrench, remove the 4 nuts highlighted in the photo below:



- Once all of the nuts are removed, simply pull the tail light housing from the vehicle. Remove the bulbs by twisting them, making sure to take note of their position in the housing.

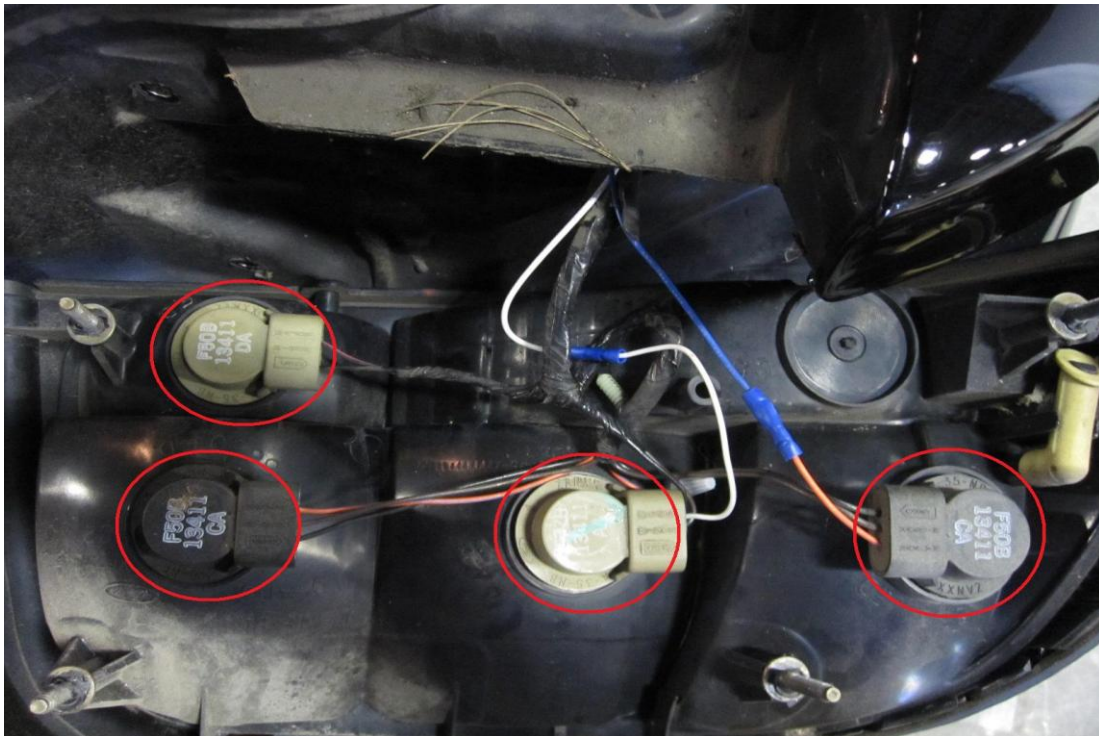

4. Install the bulbs in the new housing in the same position as they were removed from the old housing.

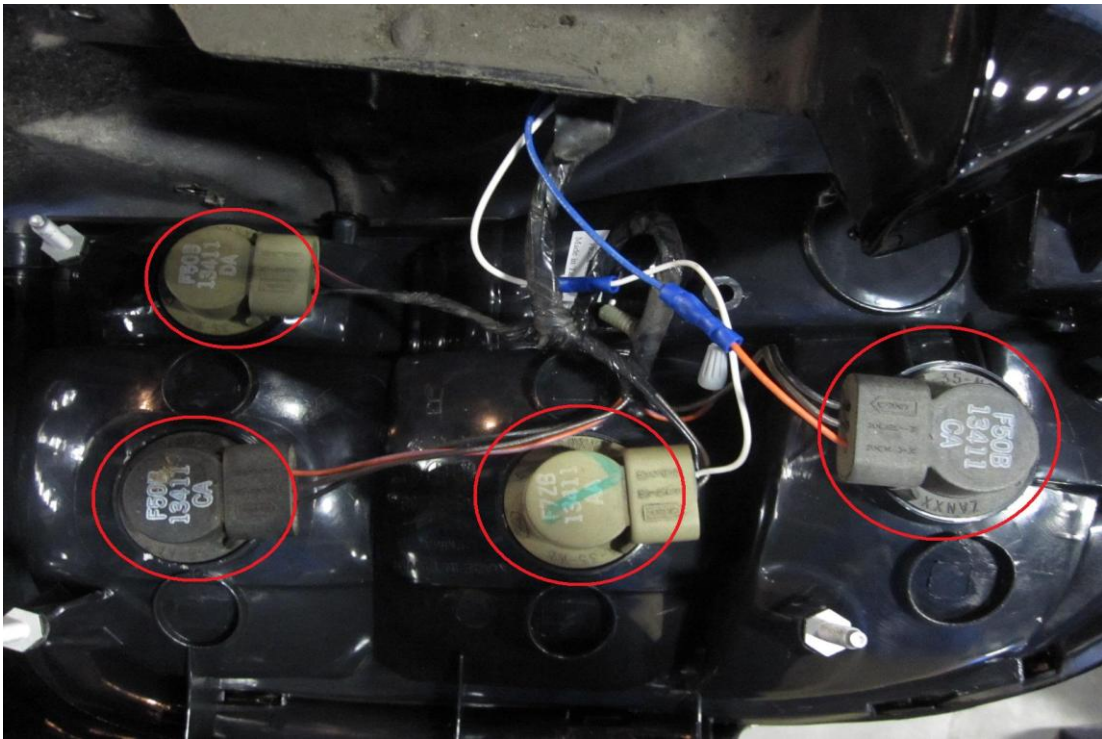

5. Place the housing back into the tail section of the vehicle and re-install using the 11mm nuts that were removed in Step 2. Repeat for other side then re-install any interior trunk trim that was removed in Step 1 to complete the installation.