

Mustang Taillight Trim (05-09) - Installation Instructions



The below installation instructions work for the following products:

- 2005-2009 Black Mustang Taillight Trim Bezel
- 2005-2009 Chrome Mustang Tail Light Trim Bezels
- Chrome Mustang Brake Light Dress-up Kit (05-09)
- Black Mustang Brake Light Dress-up Kit (05-09)



Please read through the instructions carefully before starting this project. Take the time to get all the materials together as well as all the safety equipment.


Installation:

1. Use the alcohol swab included and clean the surfaces where the chrome trim will be adhered to the taillight. Allow the car to sit in the shade for about 20 minutes to cool the surface before installation.





2. Before applying the trim, make sure all of the backing is completely removed from the 3M bonding tape.

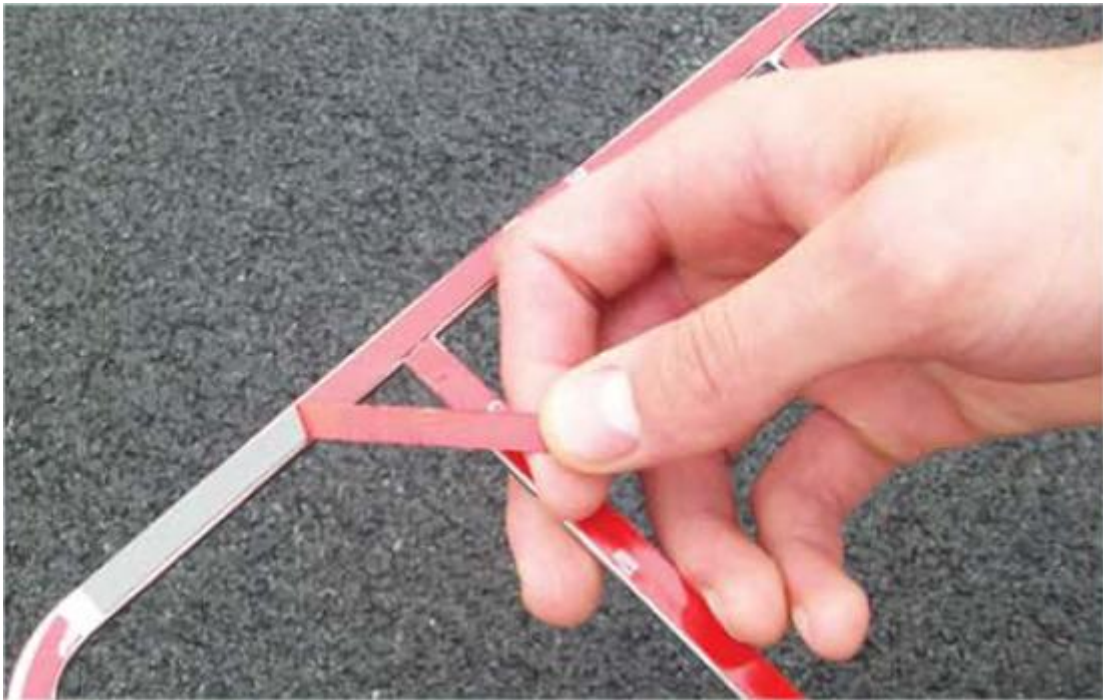

3. Once the backing tape is removed, carefully line the chrome trim up with the grooves in the taillight, and around the outer edges. Take care not to press down on the trim during this step.



4. When you feel you have successfully lined the chrome trim up with the grooves of the taillight, press firmly along the entire surface of the chrome trim to ensure a complete and sturdy bond is made with your taillight.

5. Repeat all three steps for the second chrome trim piece on the opposite taillight to finish installation.



Installation instructions provided by Manufacturer

Find more **how-tos, instructions** and **videos** at www.americanmuscle.com!