Auto Meter Phantom II Air/Fuel Ratio Gauge - Digital (79-14 All)

Item # 13557

**INSTALLED ON: 1994 Ford Mustang GT** 


**LIST OF TOOLS** 

Wire stripper, wire crimps, wire crimping tool

**STEP 1:** Find a good place to install the gauge, where it is visible from the driver's seat.



**STEP 2:** Pull up on the plastic door sill and remove it from the car.

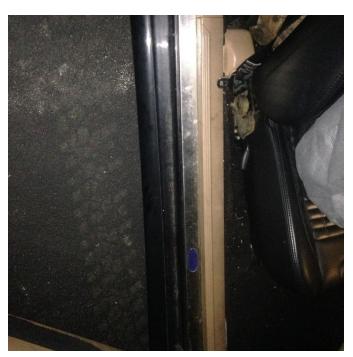


**STEP 3:** Remove the kick panel, by lifting the door sill; then pull out the plastic pin down in the front corner of the kick panel and remove the kick panel to access the computer.



**STEP 4:** Access the computer wire harness and tap the purple wire into: pin number 44, gray w/light blue stripe or pin number 43, red w/black stripe at the PCM



**STEP 5:** I use fuse piggy backs, attach the red wire to a fuse piggy back installed in a slot that gets power when the key is on such as the radio fuse and install the original fuse in the front slot and a 5amp fuse into the outer slot that feeds to the gauges. Attach the black wire to a ground screw, they are the green screws that are located in the kick panel area or the center console area of the car. There is usually a black ground wire already feeding to a ground screw.

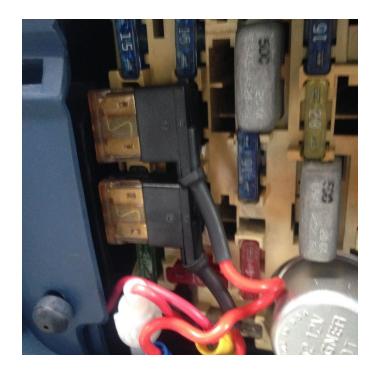

Installation Instructions written by AmericanMuscle Customer Ryan Houck 12.16.2014