11-16 GT Throttle Body Spacer

Step 1:

Remove the engine cover, firmly pull on the corners to dislodge the cover from its rubber mount. Loosen the hose clamp that holds the intake tube to the air box.

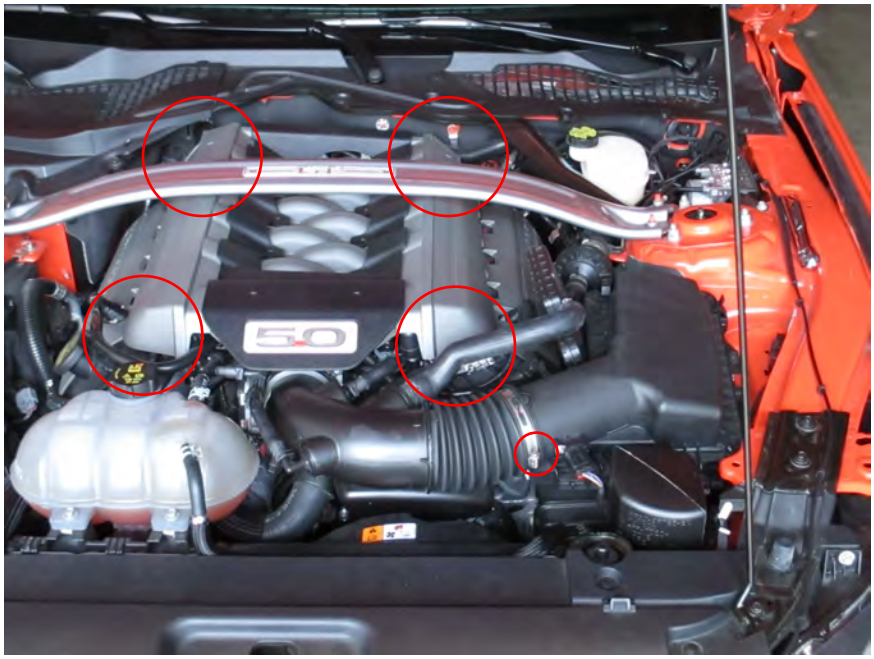

Step 2:

Loosen the hose clamp that holds the intake tube to the throttle body. Then remove the 3 vacuum hoses from the factory intake tube. Using plyers remove the sound tube from the factory intake tube.

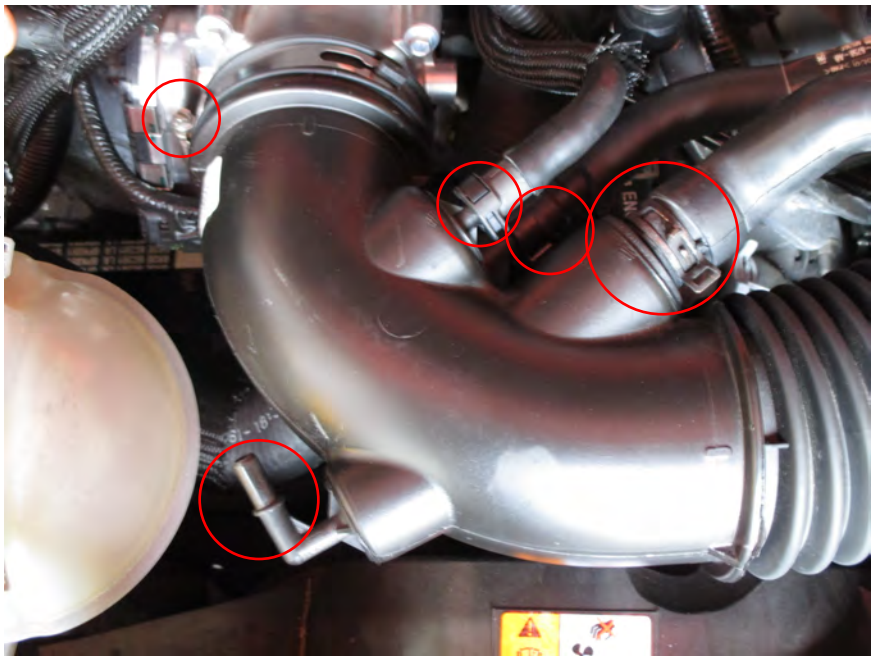

Step 3:

Unclip the electrical connection on the throttle body. Then loosen the (4) 8mm bolts holding the throttle body to the intake manifold.

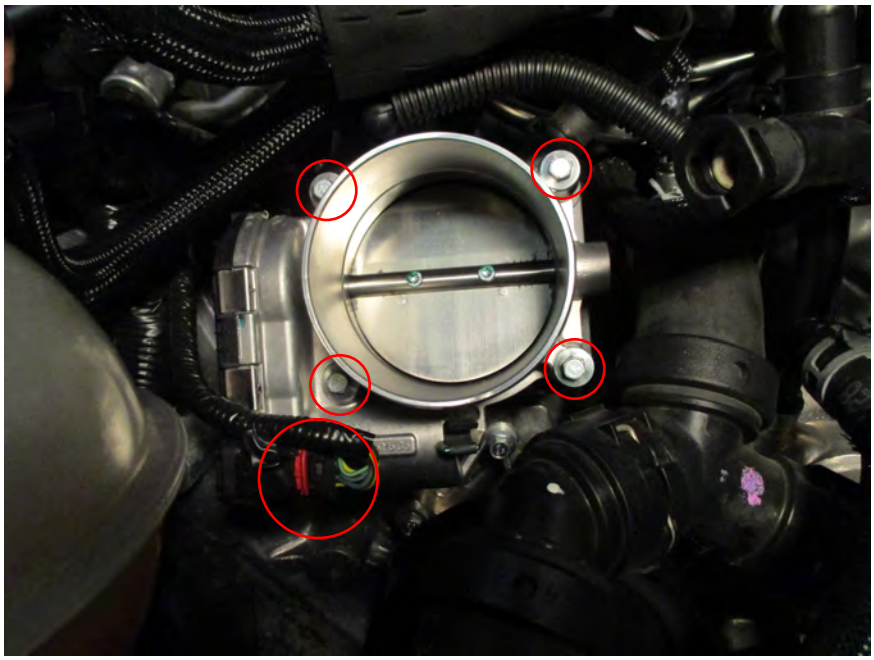

Step 4:

Install the throttle body spacer between the intake manifold and throttle body. Secure with the provided bolts.

**Note: If unused, plug the 1/8NPT holes with the provided plugs.