How to Install a Throttle Body Spacer for 2005-2010 Mustang V6

The below installation instructions work for the following products:

- **Stack Racing Throttle Body Spacer (05-10 V6)**

Here at American Muscle, we're all about DIY (do it yourself). Of course, there's nothing wrong with seeking out a little bit of tech help prior to taking on an installation on your own. Our Mustang installation guides will provide valuable instructions and hopefully answer any how-to questions that you may have along the way.

Installation Instructions for 05-10 V6 Throttle Body Spacer

Installation:

1. Remove air intake to gain access to throttle body.

2. Once you have access to throttle body, remove four 8mm bolts securing it to the intake plenum.

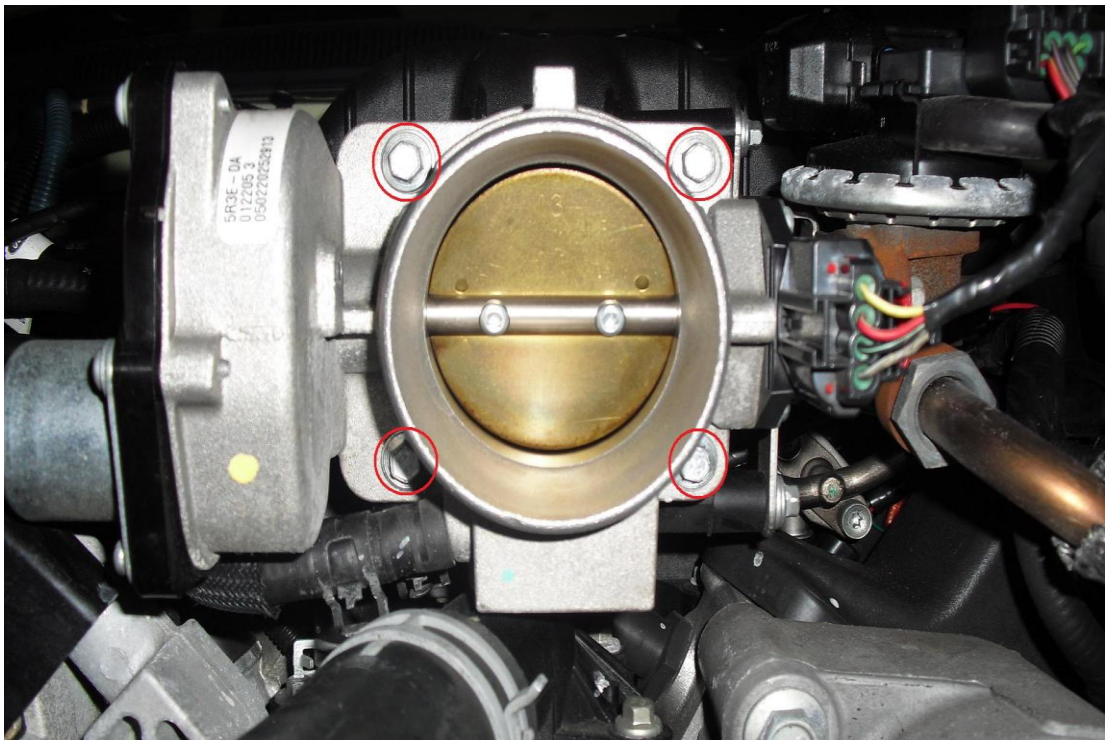

3. Pull throttle body away from the plenum and slide in the spacer and supplied gasket. Make sure the gasket goes on the throttle body side as shown.

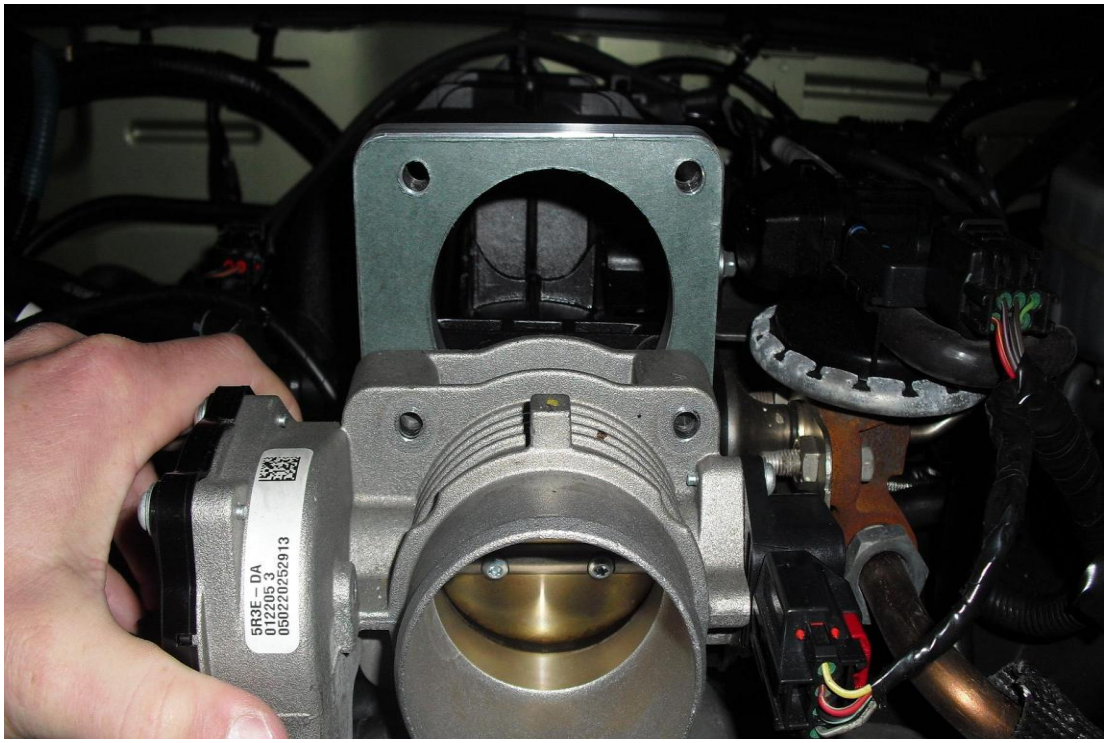

Re-install the **throttle body** to the plenum with the supplied bolts. Re-install you air intake to complete the installation.