

2015-Pres Ford Mustang Camber Plate Installation Instructions:

Protected under US Patent Numbers 8,820,759 and 9,073,577.

J&M Products once again out-does our competitors with these fully adjustable (Protected under US Patent No. 8,820,759 and 9,073,577) Camber & Caster plate assemblies for the 2015-Present Ford Mustangs. Whether you are using the car for street, autocross, road racing or drag racing these plates are designed for you. Just like our other Camber/Caster plates these come with a full lifetime warranty to the original purchaser of the product.

Benefits:


- Allows for camber and caster adjustment not available from the factory
- Allows you to align your Mustang back to factory specifications even when lowered
- Camber & caster are adjustable separately.
- Provides for caster adjustment not found on the factory mounts
- Caster adjustment to allow correction for OEM production tolerances.
- Alignment is easily adjusted at the top of the strut tower.
- Spherical bearing eliminates un-wanted deflection and precisely locates the strut shaft during cornering.
- Completely assembled and bolts in with no need for extra drilling or cutting.

Product Features:


- Over 1.7 degrees of camber adjustment, adjustable without affecting caster.
- Only Camber Caster kit that you can adjust camber without changing caster.
- 0.7 degrees of range of caster adjustment.
- PTFE lined spherical bearing manufactured in the USA.
- All parts are either plated or powder coated for great looks and long lasting protection.
- Protected under US Patent No. 8,820,759 and 9,073,577.
- Lifetime warranty on the entire camber plate to the original owner.

Note: These Camber/Caster plates are side specific.

PASSENGER SIDE

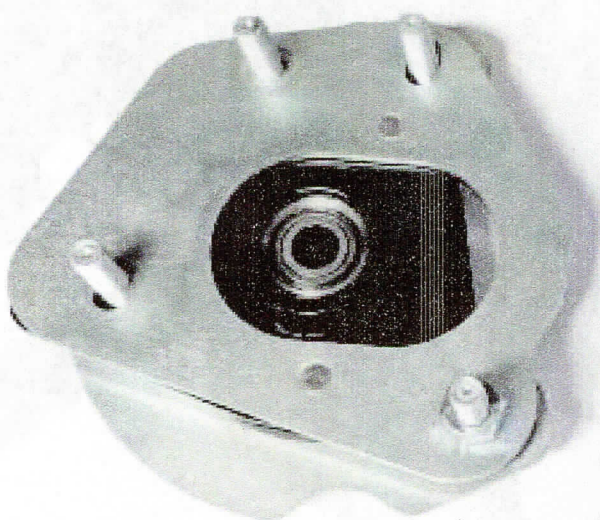

DRIVERS SIDE

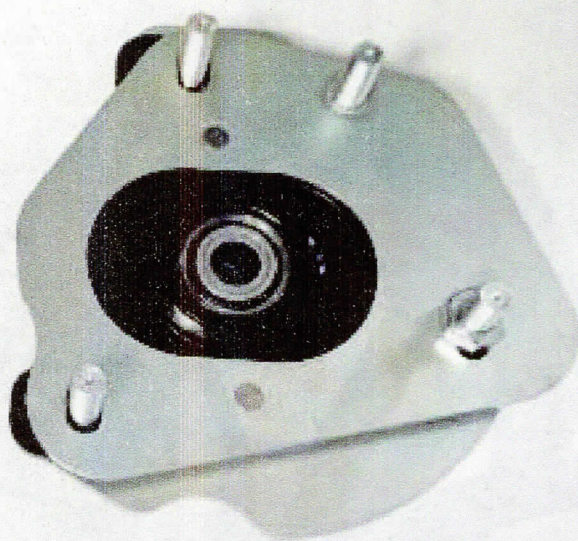

FRONT OF CAR

Tools Needed:

- ◆ Common assortment of hand tools
- ◆ Floor Jack & Jack Stands
- ◆ Torque Wrench
- ◆ Spring Compressor


Camber/Caster Plate Installation Sheet:

1. Raise the vehicle to adequate working height and properly support the vehicle using proper jack stands (not a jack).


Note: Do not jack the car up using the k-member or IRS subframe. You should only use and support the car using the rocker pinch welds.

2. Using a 21mm socket remove the front wheels and tires.


3. We recommend doing one side at a time. Start with disconnecting all the clips that attach to the strut housing.

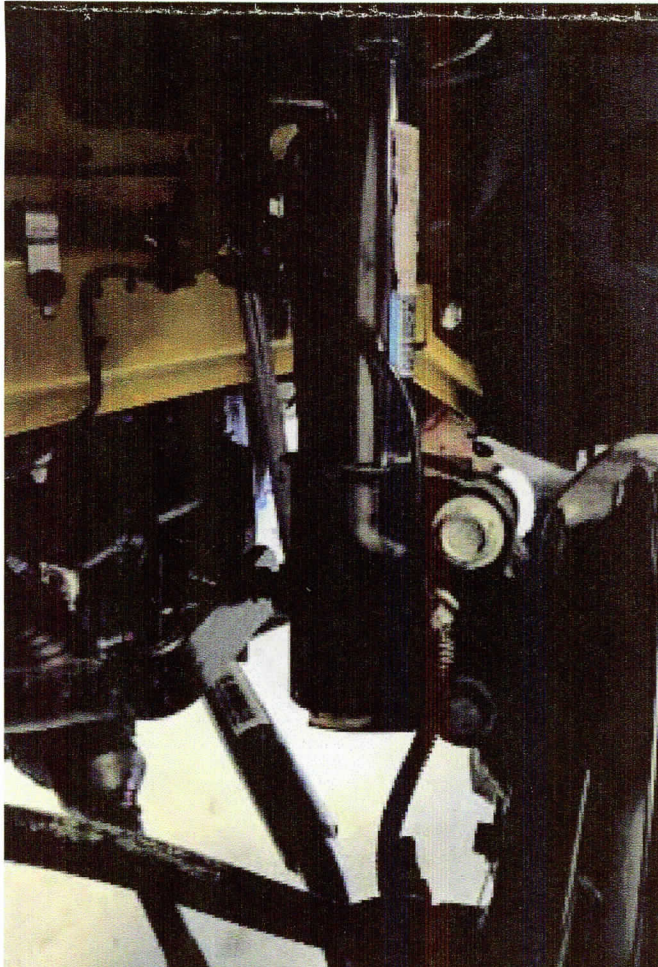


4. Remove the front anti-sway bar link from the strut housing. **DO NOT USE AN IMPACT GUN.** Do this by using a 17mm wrench on the flats of the stud and using a 18mm socket to remove the nut.

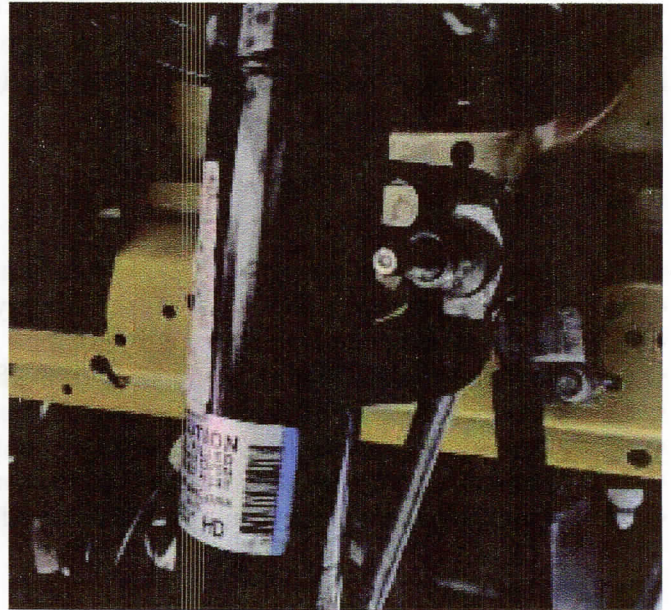

5. Using a 15mm socket remove the two caliper to spindle bolts holding on the caliper. Do not let the caliper drop or hang from the brake hose. We recommend securing it the brake hose to chassis bracket like shown in the photo.

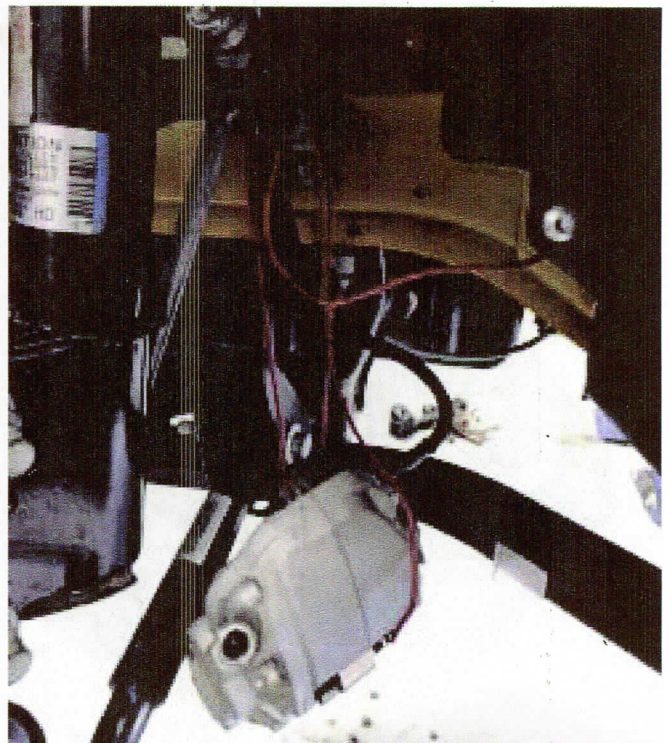


6. Remove the brake rotor and set aside.
7. Remove the strut to spindle mounting nuts with a 24mm socket. (Do not try and remove the bolt)

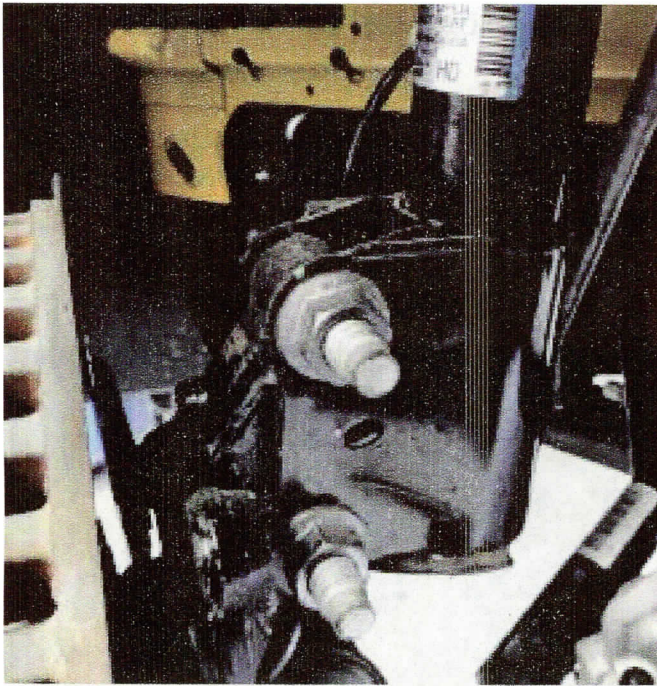


8. Carefully using a hammer hit the end of the strut to spindle mounting bolts to drive them out. These bolts are splined so it will take some force to get them out.
9. Install a 3/8" extension or screwdriver through one of the mounting holes to keep the strut and spindle assembly together.
10. Remove the 3 stock upper strut mount nuts using a 15mm socket.
11. Remove the extension or screwdriver to remove the strut assembly from the car.
12. Using a spring compressor, compress the spring until all the tension is removed from the upper strut mount spring seat.
13. Remove the strut nut and remove the stock upper strut mount. Make sure the spring seat with the rubber isolator stays on top of the spring.

14. Using the photo on page one make sure to use the appropriate side camber/caster plate and install onto the strut shaft and upper spring seat. (OEM spring seat and isolator is reused).

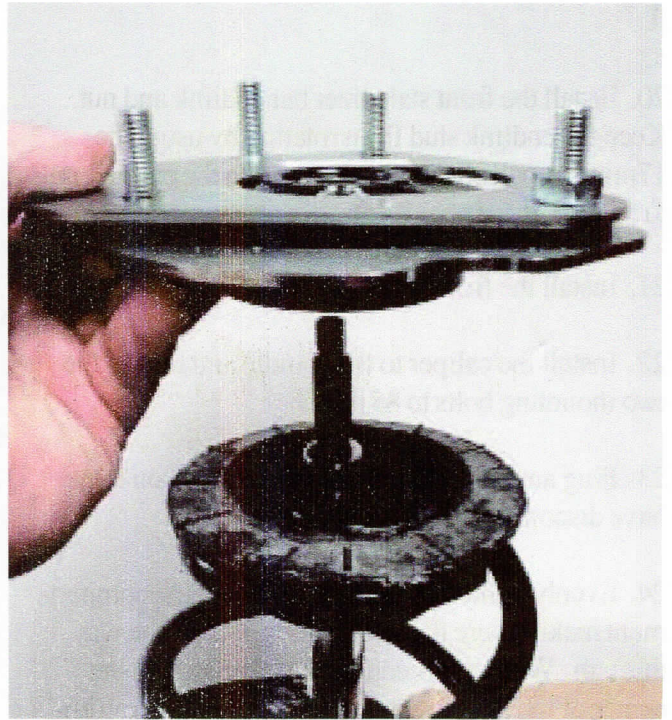

15. If using the OEM strut re-install the nut and torque to 76 lb/ft. Do not use an impact gun. If you are using an aftermarket strut, torque to the manufacturer's recommended torque specifications.
16. Place the strut assembly back into the car making sure to align the 4 studs through the factory mounting holes.
17. Place the supplied washers over the studs in the engine compartment and hand thread the supplied nuts onto the 4 studs.

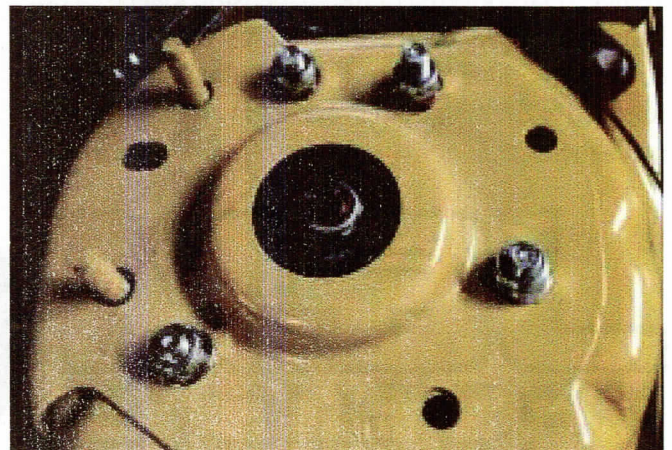

18. Attach the strut to the spindle. Make sure to install the strut to spindle bolts from the front side of the spindle.

19. Torque the spindle to strut mount nuts to 184 lb/ft.

20. Install the front stabilizer bar endlink and nut. Keep the endlink stud from rotating by using the 17mm wrench on the flats and torque the endlink nut to 85 lb/ft.

21. Install the front rotor

22. Install the caliper to the spindle and torque the two mounting bolts to 85 lb/ft.

23. Plug any of the electrical connectors you may have disconnected back into the strut.

24. Evenly tighten all the nuts in the engine compartment making sure the studs pull up and all the way through. We recommend locating the strut in the center of the strut tower hole to get you to an alignment shop. Torque the four M10 nuts to 26 lb/ft.

25. Repeat steps 3-24 on the other side of the car.

26. Install the wheels and lower the car onto the ground. Torque the OEM lug nuts to 148 lb/ft.

27. Align your vehicle to your desired alignment specifications or factory specifications. Caster should be set first.

Alignment Notes:


You will not be able to adjust these plates with the vehicle on the ground or the suspension loaded. The front must be raised in order to adjust the camber/caster plate. Due to the anti-roll bar loading it may be required to lift both front tires off the ground to make adjustments.

These J&M camber/caster plates have separate adjustments for camber and caster. You must adjust caster first and lock down the M10 caster nut to 26 lb-ft and then adjust camber.


Adjusting Caster & Camber:

To adjust caster loosen all four mounting nuts. Once caster is adjusted torque the caster nut to 26 lb/ft. and adjust camber. Once camber is set torque the remaining three mounting nuts to 26 lb/ft.

Caster Adjustment

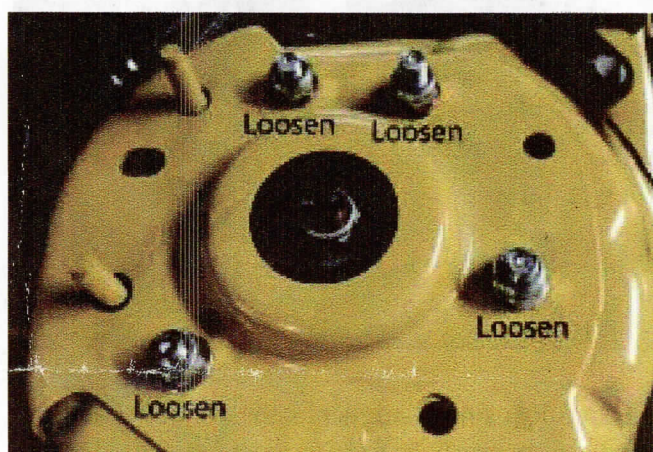

Camber Adjustment

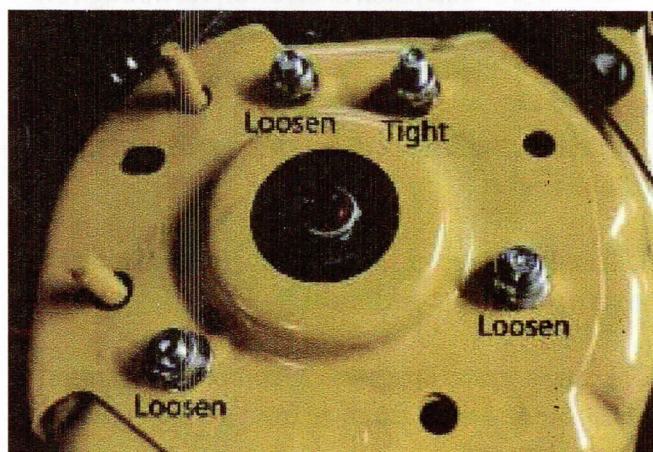

275 Tank Farm Road
SAN LUIS OBISPO CA 93401
Office 805-544-1128
info@hotpart.com

IMPORTANT INFORMATION:

In the event that you are missing parts, need help with installation, or warranty. Please make sure you call J&M Products at 805-544-1128 and NOT THE DEALER YOU ORDERED THEM FROM.

J&M Products Support Team.



275 Tank Farm Road
San Luis Obispo CA 93401
Office 805-544-1128
Fax 805-543-1664